



Electrolux

Instruction Book

ETS3505
Toaster



GB INSTRUCTION BOOK

KO 설명서

ZH 說明手冊

ZH 说明书

VI SÁCH HƯỚNG DẪN

TH សៀវភៅ

JA 使用説明書

IN BUKU PANDUAN

CONTENTS

ENGLISH	5
한국어	X
中文(繁體)	X
中文(简体)	X
TIẾNG VIỆT	X
ภาษาไทย	X
日本語	X
BAHASA INDONESIA	X

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information: www.electrolux.com



Register your product for better service: www.electrolux.com/productregistration



Buy Accessories and Consumables for your appliance: www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information




General information and tips



Environmental information

Subject to change without notice.

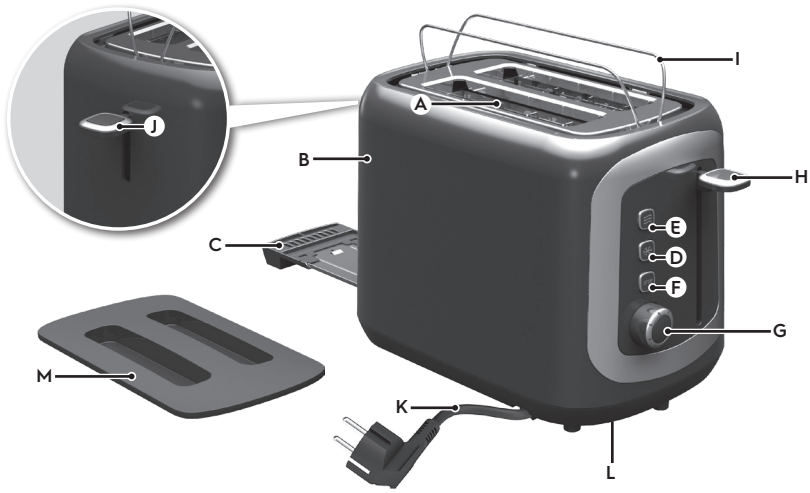

COMPONENTS


- A. Toasting slot
- B. Thermally insulated outer housing
- C. Crumb drawer
- D. Defrost button with indicator lamp
- E. Reheat button with indicator lamp
- F. Stop button with indicator lamp
- G. Browning control
- H. Start lever
- I. Roll rack for crisping up bread rolls
- J. Roll rack button
- K. Power cord and plug
- L. Cord storage (on the underside of the toaster)
- M. Dust cover

SAFETY ADVICE

Read the following instruction carefully before using the appliance for the first time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
 - the supply cord is damaged,
 - the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary an extension cable suitable for 10 A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always place the appliance on a flat, level surface.
- Never leave the appliance unattended while connected to the supply mains.
- The appliance must be switched off and the mains plug withdrawn each time after use, before cleaning and maintenance.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- Do not immerse the appliance in water or any other liquid.
- Do not use or place the appliance on a hot surface or near source of heat
- Warning: Avoid spillage on the connector.
- Attention: The heating element surface is subject to residual heat after use.
- The mains cable must not come into contact with any hot parts of the appliance.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Crumbs can burn, clean crumb tray regularly. Never use the appliance

without crumb tray.

- Do not reach into the toasting slot with your fingers or metal utensils. There is a risk of injury and damaging the appliance.
- Bread can burn. Do not use the toaster underneath or near inflammable objects (e.g. curtains). The toaster must not be left unattended while running.
- Do not cover the toasting slot when toasting.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- The surfaces are liable to get hot during use .

This appliances is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and others working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.


GETTING STARTED


1. **Before you start using the toaster for the first time**, it should be placed near an open window and operated a few times at maximum browning setting **without any bread**.
2. **How to use the toaster:** Plug the cord into the mains, insert bread and select browning setting (1-7). Press down the start lever.
3. **When the bread has reached the desired degree of browning**, the toaster switches off automatically and the bread is lifted up.

FEATURES AND CLEANING

4. **Operating features:** to interrupt toasting, press the stop button (A). To toast frozen bread, press the defrost button (B) and to warm up already toasted bread, press the reheat button (C).
5. **To crisp rolls or other bread**, use the roll rack. Place the bread on the activated rack and select browning setting 2. Switch the toaster on by pressing the start lever. When it's finished, turn the bread and repeat the process. **Caution – the rack becomes hot!**
6. **Cleaning and care:** unplug the toaster and allow it to cool down. Empty the crumb drawer. Wipe the outer surfaces with a slightly moist cloth. **Never use caustic or abrasive cleaners, and never immerse the machine in liquid!**

DISPOSAL

Recycle the materials with the symbol .
Put the packaging in applicable containers to recycle it.
Help protect the environment and human health and to recycle waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



3484 E ETS3505 02 01 0315

Share more of our thinking at www.electrolux.com

electrolux.com/shop



Electrolux Floor Care AB
S:t Göransgatan 143
S-105 45 Stockholm
Sweden