MÁY SẤY QUẦN ÁO
HƯỚNG DẪN SỬ DỤNG

DC-80S5C

Máy Sấy Này Phải Nối Tiếp Đất

Hotline Viet Nam: 1900 1203
Email: cskh@galanz.com
www.galanz.com/vn

MỤC LỤC

1.	Thông tin an toàn	3-6
2.	Mô Tả Thiết Bị	7
3.	Bảng Điều Khiển	7
	Sử Dụng Lần Đầu	7
	Sử Dụng Mỗi Ngày	8
4.	Lựa Chọn Chương Trình Sấy	8
	Sấy Tự Động	8
	Sấy Theo Thời Gian	9
5.	Các Nút Chọn Chức Năng	9
	Tổ hợp Nút CHUÔNG BÁO	9
	Chọn Mức Độ Sấy	9
	Nút CHỐNG NHĂN	9
	Nút HẸN GIỜ	10
	Màn Hình Hiển Thị	10
	Nút BẮT ĐẦU/TẠM DỪNG	10
	Đèn Hiển Thị	11
	Khi Đã Sấy Xong	11
	Tổ hợp Nút KHÓA TRẺ EM	12
6.	Sau Mỗi Lần Sấy	12
	Cách Sấy Hiệu Quả	13
	Trước Khi Cho Đồ Vào Máy	13
	Khối Lượng Sấy Tối Đa	14
	Chương Trình Sấy Tự Động	15
7.	Vệ Sinh & Bảo Trì	16-18
8.	Sự Cố & Hướng Giải Quyết	18
9.	Thông Số Kỹ Thuật	19
10.	Vật Liệu Bao Bì	22
11.	Sử Dụng Tiết Kiệm & Hiệu Quả	23
12.	Sơ Đồ Điện	24

Cảnh Báo

- Vui lòng đọc và hiểu rõ hướng dẫn an toàn này trước khi sử dụng.
- Các mục được ghi dưới đây là các biện pháp phòng ngừa an toàn rất quan trọng, cần phải tuân thủ.
- Nhà sản xuất sẽ không chịu trách nhiệm và không áp dụng bảo hành chính hãng đối với bất kỳ hỏng hóc và tổn thất nào gây ra bởi việc không tuân thủ các thông tin được đề cập trong tài liệu hướng dẫn vận hành và lắp đặt này.
- Thiết bị này có thể được sử dụng bởi (a) trẻ em từ 8 tuổi trở lên và (b) những người bị suy giảm thể chất, giác quan (hoặc tinh thần hoặc thiếu kinh nghiệm và kiến thức) nếu họ được giám sát và được hướng dẫn sử dụng thiết bị một cách an toàn, và họ hiểu các mối nguy hiểm có thể xảy ra. Không để trẻ em chơi nghịch thiết bị. Vệ sinh và bảo quản máy không được thực hiện bởi trẻ em mà không có sự giám sát của người lớn.
- Không được cắm điện thiết bị này thông qua thiết bị chuyển mạch bên ngoài, chẳng hạn như bộ hẹn giờ, hoặc kết nối với mạch điện có chức năng bật và tắt tự động.

Tránh Bị Điện Giật

- Không tự ý tháo lắp máy, sửa chữa hoặc sửa đổi bởi những người không phải là nhân viên bảo trì chuyên nghiệp.
- Cần hệ thống cung cấp điện (dòng điện, điện áp, dây cáp) có cầu chì với các thông số kỹ thuật phù hợp, và phải đáp ứng các yêu cầu của máy sấy ở trạng thái tải bình thường và các thiết bị an toàn.

Máy Sấy Này Phải Nối Tiếp Đất

- Phích cắm điện phải được nối với ổ cắm ba lõi có sẵn dây tiếp đất và được nối đất đúng cách và chắc chắn.
- Nếu dây cắm điện bị hỏng, phải được thay thế bởi nhà sản xuất, đại lý dịch vụ của hãng hoặc những người có trình độ tương tự để tránh nguy hiểm.
- Không rút phích cắm điện bằng cách kéo dây nguồn. Cầm và rút ở vị trí đầu phích cắm.

- Không sử dụng dây nguồn khi kết nối phích cắm điện với dây nguồn bị lỏng.
- Không chạm vào phích cắm điện khi tay ướt. Lau bụi hoặc nước rơi trên phích cắm bằng vải khô.
- Không uốn cong quá mức dây điện hoặc đặt dây điện dưới vật có trọng lượng nặng.
- Không sử dụng dây nguồn, ổ cắm, phích cắm điện đã bị hỏng, bị hư hại hoặc bong tróc.

⚠ Phòng Tránh Cháy Nổ

- Không để chất lỏng dễ cháy như xăng, dầu và cồn vào Máy Sấy hoặc gần đó. Không cho quần áo dính các chất lỏng nói trên vào Máy Sấy.
- Không cắm hoặc rút phích cắm điện khi xảy ra rò rỉ khí gas hoặc khí dễ cháy khác.

⚠ Có Thể Xảy Ra Tai Nạn Hỏa Hoạn / Đoản Mạch Hoặc Rò Rỉ Điện

- Không lắp đặt máy gần nguồn lửa hoặc nguồn nhiệt.
- Không để nến hoặc thuốc lá đang cháy trên máy.
- Không lắp đặt máy ở những nơi ẩm ướt hoặc có mưa, sẽ dễ xảy ra hư hỏng bắt lửa hoặc các tai nạn khác do các giọt nước đọng lại trên các bộ phận điện.
- Không lắp đặt máy sấy ở những nơi có ánh nắng trực tiếp chiếu vào, gây lão hóa linh kiện nhựa và cao su.
- Không phun nước trực tiếp vào máy khi vệ sinh bảo dưỡng.
- Để tránh nguy cơ hỏa hoạn do sấy quá khô, không dùng máy sấy để sấy các vật dụng sau: Gối, bông (gòn) và những thứ tương tự (những vật này sẽ tích tụ nhiệt).
- Khi sử dụng chất tẩy vết bẩn trên đồ giặt, hãy đảm bảo rằng bạn chạy thêm một chu kỳ giặt xả trước khi cho vào máy sấy.
- Lấy hết đồ vật có thể sót lại trong túi quần áo trước khi sấy, đặc biệt không để bật lửa, hộp quẹt, diêm vào máy sấy.
- **Các đồ vật bị dính chất bẩn như dầu ăn, axeton, cồn, xăng, dầu hỏa, chất tẩy vết đốm, nhựa thông, sáp và chất tẩy sáp**

nên được giặt trong nước nóng có thêm một lượng nước/bột giặt trước khi sấy trong máy sấy quần áo.

- **Các vật dụng bị dính dầu có thể bốc cháy tự phát, đặc biệt khi tiếp xúc với các nguồn nhiệt như trong máy sấy quần áo. Khi đó các vật dụng này sẽ bị nóng, gây ra phản ứng oxy hóa trong dầu và có thể gây cháy.**
- Đảm bảo các lỗ hở ở đế máy sấy không bị che khuất.
- Không nối ống dẫn khí thải từ máy sấy vào chung ống khói được sử dụng từ các thiết bị đốt bằng khí đốt hoặc các nhiên liệu khác.

Cảnh Báo:

Không dừng máy giữa chừng trước khi kết thúc chu trình sấy trừ khi tất cả đồ sấy được nhanh chóng lấy ra để nhiệt được tản ra.

Phòng Tránh Thương Tích

- Máy này không dành cho trẻ nhỏ hoặc người bị suy giảm thể chất mà không được người lớn giám sát.
- Để tránh nguy hiểm cho trẻ em, hãy đảm bảo rằng tất cả bao bì của máy được loại bỏ một cách an toàn.
- Chờ cho đến khi lồng sấy dừng hẳn trước khi lấy đồ giặt ra khỏi máy.
- Trẻ em và thú nuôi phải tránh xa khi máy sấy đang hoạt động để đảm bảo không bị mắc kẹt. Luôn kiểm tra lồng sấy cẩn thận trước khi đóng cửa máy.

Các Chỉ Dẫn Khác

- Máy này chỉ được sử dụng trong hộ gia đình. Không được sử dụng làm mục đích khác ngoài mục đích sấy đồ vải sợi.
- Chỉ sử dụng đồ vải sợi đã giặt, được thiết kế để có thể sấy khô bằng máy. Làm theo hướng dẫn trên nhãn mác của đồ vải sợi.
- Mọi công việc về điện khi lắp đặt máy này phải được thực hiện bởi thợ điện có trình độ chuyên môn.
- Nếu máy được đặt trên sàn trải thảm, vui lòng điều chỉnh các chân máy để không khí lưu thông tự do bên dưới máy.

- Không trèo lên máy sấy hoặc để các vật nặng / thiết bị tỏa nhiệt hoặc các vật dụng có nước hoặc chất lỏng rò rỉ trên máy sấy, nhằm tránh gây biến dạng mặt ốp và thành phần nhựa.
- Những vật như tiền xu, chốt an toàn, đinh, ốc vít, đá hoặc bất kỳ vật liệu sắc nhọn nào khác có thể làm hư hỏng máy và không được cho vào máy.
- Sau khi lắp đặt máy, hãy đảm bảo rằng máy không đè lên cáp điện, hoặc đè lên ống thông hơi.
- Không sấy các đồ vật như cao su (xốp), mũ tắm, hàng dệt chống thấm nước, đồ dùng có cao su và quần áo hoặc gối có đệm cao su xốp.
- Luôn tháo dây nguồn điện sau khi đã sử dụng, và trước khi vệ sinh bảo trì máy.
- Không sấy quá tải, quá nhiều. Xem mục liên quan ở phần sau của sách này.
- Quần áo chưa vắt khô không được cho vào máy sấy.
- Quần áo đã tiếp xúc với các sản phẩm dầu mỏ dễ bay hơi không được sấy bằng máy. Nếu sử dụng chất lỏng tẩy rửa dễ bay hơi, cần đảm bảo rằng chất lỏng đó đã được loại bỏ khỏi quần áo trước khi cho vào máy.
- Không bao giờ sử dụng máy sấy nếu cáp nguồn, bảng điều khiển, bề mặt máy hoặc đế máy bị hư hại, để lộ các chi tiết bên trong.
- Không dùng máy sấy nếu đã có sử dụng hóa chất công nghiệp để làm sạch đồ vải sợi.
- Không được để xơ vải tích tụ xung quanh máy sấy.
- Không sấy đồ chưa giặt.
- Chất làm mềm vải hoặc các sản phẩm tương tự phải sử dụng theo hướng dẫn sử dụng nhà sản xuất liên quan.
- Bước cuối cùng của chu trình sấy diễn ra không có nhiệt (chu trình làm nguội) để đảm bảo rằng vải sợi được giữ ở nhiệt độ không gây hư hại.
- Không lắp đặt máy phía sau cửa có khóa, cửa trượt hoặc cửa có bản lề ở phía đối diện với máy sấy quần áo, để tránh cửa máy bị kẹt không mở được hoàn toàn.
- Bộ lọc xơ vải phải được làm sạch thường xuyên.
- Phải có hệ thống thông gió thích hợp để tránh dòng khí nóng bay ngược vào phòng từ các thiết bị đốt các nhiên liệu khác, bao gồm cả khói lửa (trong trường hợp có hỏa hoạn).

MÔ TẢ THIẾT BỊ

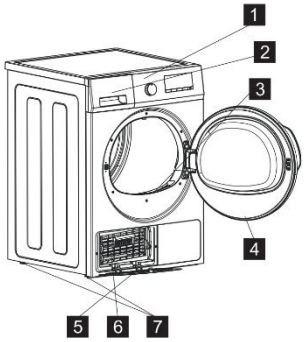

1. Bảng điều khiển
2. Hộc nước ngưng tụ
3. Bộ lọc xơ vải
4. Cửa máy
5. Nắp che máy ngưng tụ
6. Máy ngưng tụ
7. Chân máy, điều chỉnh được chiều cao.

BẢNG ĐIỀU KHIỂN

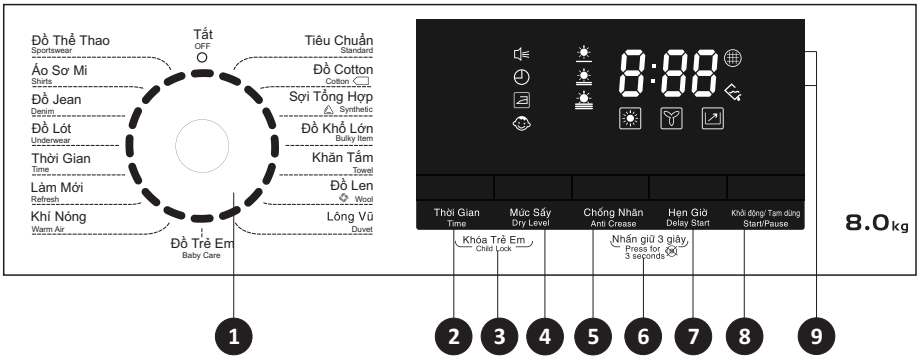

1. Núm chọn chương trình sấy	6. Bật tắt chuông báo
2. Chọn Thời gian	7. Hẹn giờ sấy
3. Khóa an toàn trẻ em	8. Bắt đầu / Tạm dừng
4. Chọn mức độ sấy	9. Đèn báo hiệu: Bộ lọc xơ vải; hoặc Hộc nước ngưng tụ.
5. Chọn chế độ chống nhăn vải	

Sử Dụng Lần Đầu

- Đảm bảo cung cấp nguồn điện tuân theo hướng dẫn lắp đặt.
- Loại bỏ bao bì và bất kỳ vật liệu nào khỏi lồng sấy.
- Trước khi sử dụng máy sấy quần áo lần đầu tiên, bạn nên đặt vài miếng vải ẩm bên trong thiết bị và sấy khô trong 30 phút, để làm sạch bụi bên trong lồng sấy mới.

Sử Dụng Mỗi Ngày

- Mở cửa.
- Cho quần áo vào lồng sấy, từng món một, giũ thẳng càng nhiều càng tốt.
- Đóng cửa máy. Kiểm tra đồ giặt không bị kẹt giữa cửa và bộ lọc.

LỰA CHỌN CHƯƠNG TRÌNH SẤY

- Xoay núm điều khiển để chọn chương trình mong muốn. Đèn hiển thị chương trình tương ứng sẽ sáng. Chương trình sẽ tự hủy nếu bạn không nhấn thêm nút nào sau 10 phút.

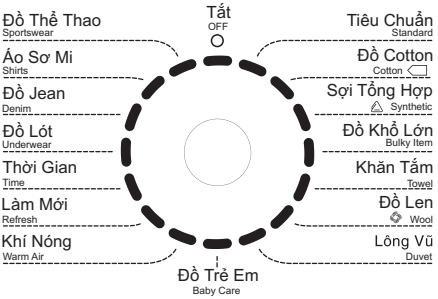

Lưu ý: Cotton là "chương trình sấy vải tiêu chuẩn". Chương trình này phù hợp để làm khô quần áo thông thường và đây là chương trình hiệu quả nhất về mức tiêu thụ năng lượng để sấy khô quần áo.

Một số quần áo dày (quần jean, khăn tắm lớn) có thể còn một số nơi khó khô. Nếu bạn thấy chúng chưa khô hoàn toàn vào cuối chương trình, hãy sử dụng chương trình "Thời gian" để sấy tiếp.

SẤY TỰ ĐỘNG

Bạn có thể chọn chương trình sấy khác nhau tùy vào chất liệu quần áo của bạn. Máy có bộ cảm biến độ ẩm để tự động điều chỉnh thời gian sấy khô tối ưu nhất. Máy sấy này phù hợp với vải cotton, vải sợi tổng hợp, vải lụa, và chương trình sấy ngừa vi khuẩn.

SẤY THEO THỜI GIAN

Bạn có thể chọn thời gian sấy tùy theo nhu cầu thực tế. Để hủy một chương trình đang chạy, hãy xoay núm đến vị trí "***Tắt***". Khi kết thúc quá

trình sấy, hãy xoay nút chọn sang "Tắt" để tắt máy trước khi lấy đồ sấy ra.

CÁC NÚT CHỌN CHỨC NĂNG

Tùy thuộc vào chương trình, các chức năng khác nhau có thể được kết hợp. Nút chức năng phải được chọn **sau khi** chọn chương trình mong muốn và trước khi nhấn nút ***Bắt đầu/Tạm dừng***.

Ví dụ: chọn chương trình "***Đồ Jean***", bật chức năng "***Chuông báo***" và bật chức năng "**Chống nhăn**" có thể được kết hợp. Khi nhấn các nút này, đèn báo tương ứng sẽ sáng. Khi nhấn phím lần nữa, đèn báo tương ứng sẽ tắt.

Tổ hợp nút CHUÔNG BÁO

Sau khi bật máy, Chuông báo sẽ tự hoạt động bật nếu bạn không thực hiện thao tác nào. Có thể bật hoặc tắt Chuông báo trong quá trình sấy. Bằng cách nhấn đồng thời nút "***Chống nhăn***" và nút "***Hẹn giờ***" trong 3 giây, Chuông báo sẽ được bật hoặc tắt, và báo tương ứng sẽ bật/tắt theo.

Khi Chuông báo đang được bật, tín hiệu âm thanh sẽ phát ra trong trường hợp sau:

- Mở cửa trong khi vận hành.
- Khi bình chứa nước ngưng tụ đầy.
- Vào cuối chương trình sau giai đoạn làm mát.

Khi Chuông báo đang bật, nếu bạn nhấn tổ hợp phím này một lần nữa, bộ rung sẽ tắt.

CHỌN MỨC ĐỘ SẤY

Trước khi bắt đầu sấy, bạn có thể chọn mức độ sấy mong muốn. Các mức độ sấy sẵn có bao gồm **NẶNG** **MẠNH** **BÌNH THƯỜNG**

Các mức độ sấy này chỉ hoạt động với 5 chương trình sấy gồm: Tiêu chuẩn; Cotton; Sợi Tổng hợp; Đồ Khổ lớn; Khăn tắm.

Nút CHỐNG NHĂN

Chức năng Chống nhăn sẽ tự chạy ở cuối mỗi chương trình sấy. Có thể chọn thời gian Chống nhăn lâu hơn khi máy ở chế độ chờ hoặc đang hoạt động.

Nút HẸN GIỜ

Nút này cho phép bạn hẹn thời gian sấy trong 24 giờ sắp tới. Phải chọn giờ hẹn sau khi đã chọn chương trình sấy và trước khi nhấn nút ***Bắt đầu/Tạm dừng***. Mỗi lần nhấn nút thời gian tăng thêm 1 giờ.



Có thể hẹn giờ trong cả hai trường hợp trước và sau khi chọn chức năng (Chuông báo hoặc Chống nhăn). Quá trình đếm ngược bắt đầu sau khi nhấn nút ***Bắt đầu/Tạm dừng*** và đèn tương ứng sẽ sáng. Màn hình hiển thị thời gian còn lại. Thời gian còn lại được hiển thị từng giờ.

MÀN HÌNH HIỂN THỊ.

Màn hình hiển thị các thông tin sau:

Sau khi đã chọn chương trình sấy, thời lượng của chương trình (giờ/phút) sẽ hiện trên màn hình. Máy sẽ tính toán tự động trên cơ sở tải trọng tối đa được chấp nhận cho từng loại vải và mức độ sấy cần thiết. Khi chương trình bắt đầu, thời gian còn lại được hiển thị sau mỗi 1 phút

- HẸN GIỜ: Nếu bạn đã chọn Hẹn giờ, màn hình sẽ hiển thị thời gian đếm ngược được hiển thị từng giờ. Khi nhấn nút "***Bắt đầu/Tạm dừng***", máy sẽ bắt đầu quá trình hẹn giờ còn lại. Nếu bạn muốn kiểm tra chương trình đã chọn, hãy nhấn lại nút "***Bắt đầu/Tạm dừng***", máy sẽ hiển thị thời lượng của chương trình đã chọn trước đó.
- CHỌN SAI CHỨC NĂNG: Nếu bạn chọn một chức năng không tương thích với chương trình sấy đã chọn, màn hình sẽ hiển thị ErS (lỗi). Nếu bạn chọn chương trình khác do thao tác không chính xác trong khi chương trình đang chạy, màn hình hiển thị ErS (lỗi).

Nút BẮT ĐẦU/TẠM DỪNG

Nhấn nút này để khởi động máy sấy sau khi đã chọn chương trình và các chức năng. Nếu cửa máy được mở trong khi chương trình đang chạy, phải nhấn lại nút này sau khi đóng cửa để máy chạy tiếp chương trình đã chọn. Trong trường hợp này, đèn của nút ***Bắt đầu/Tạm dừng*** nhấp nháy để nhắc bạn rằng cần phải nhấn lại nút.

ĐÈN HIỂN THỊ

Các đèn cho biết các chức năng sau:

Đèn Sấy: Đèn này cho biết máy đang trong giai đoạn sấy.

Đèn Mát: Đèn này cho biết máy đang trong giai đoạn làm nguội. Khi kết thúc quá trình sấy, có giai đoạn làm nguội 2 phút để làm quần áo bớt nóng.

Đèn kết thúc chương trình: Đèn này sáng khi kết thúc giai đoạn làm nguội.

Đèn chống nhăn: Đèn này sáng khi chức năng chống nhăn được chọn.

Đèn báo bộ lọc: xuất hiện vào mỗi chu kỳ để nhắc bạn rằng bộ lọc phải được làm sạch khi kết thúc chương trình.

Đèn khóa trẻ em : Đèn này cho biết các nút điều khiển đã bị khóa.

Đèn chuông báo: Đèn này sáng khi bạn chọn bật chuông báo.

Đèn khởi hẹn giờ: Đèn này sáng khi chức năng hẹn giờ được chọn.

Đèn báo nước đầy hoạt động sau mỗi chương trình và khi hộc nước đầy, nhắc nhở bạn đổ hết nước trong bình chứa. Ghi chú! Đổ hết nước trong hộc sau mỗi chương trình để tránh bị chuông báo vào lần sấy sau.

KHI ĐÃ SẤY XONG

Tất cả các chương trình sấy kết thúc với giai đoạn làm mát 5 hoặc 10 phút. Nếu đồ sấy không được lấy ra vào cuối chu kỳ, máy sấy sẽ tự chạy giai đoạn chống nhăn (thời gian: tối đa 30 phút). Nếu bạn không lấy đồ giặt ra, máy sấy sẽ tự động dừng khi kết thúc giai đoạn chống nhăn. Màn hình hiển thị ***END*** kết thúc và chuông sẽ phát ra âm thanh trong 15 giây nếu bạn đã chọn bật chuông. Để hoàn tất, hãy xoay núm điều khiển về vị trí ***Tắt***, các đèn sẽ tắt theo.

Tổ hợp nút KHÓA TRẺ EM

Khi máy đang bật, nhấn tổ hợp nút "***Thời gian***" và "***Mức sấy***" trong vài giây, hệ thống sẽ khóa tất cả các nút. Khi đó tất cả các nút đều không nhấn được ngoại trừ nút "***Tắt***". Nếu bạn muốn máy trở lại trạng thái bình thường, hãy nhấn lại tổ hợp nút "***Thời gian***" và "***Mức sấy***" trong vài giây. Chức năng Khóa Trẻ em sẽ không có tác dùng trong các trường hợp sau:

- Mở cửa trong khi vận hành.
- Lấy ngăn chứa bộ lọc ra trong khi vận hành.
- Ngăn chứa nước đầy

Bạn có thể đặt lại chức năng "Khóa trẻ em" khi khởi động lại máy.

SAU MỖI LẦN SẤY

Quan Trọng

Nếu bạn dừng máy trước khi thời gian sấy kết thúc, chúng tôi khuyên bạn nên xoay núm chọn chương trình sang vị trí "Làm mới" và đợi cho đến khi kết thúc giai đoạn làm mát này trước khi lấy đồ giặt ra. Điều này sẽ tránh tích tụ nhiệt bên trong máy. Để thực hiện việc này, trước tiên hãy xoay núm sang "***Tắt***" rồi xoay đến "***Làm mới***" và nhấn nút "***Bắt đầu/Tạm Dừng***".

Thay đổi chương trình sấy: Để thay đổi một chương trình đang chạy, trước tiên hãy hủy chương trình đó bằng cách xoay núm về vị trí ***Tắt***. Chọn chương trình mới và nhấn nút ***Bắt đầu/Tạm Dừng***.

Chú ý: Máy hiển thị "- --" đối với trạng thái không hoạt động

"- --"Chế độ chờ, sau 10 phút nếu không có bất kỳ hoạt động nào, máy sẽ chuyển sang trạng thái không hoạt động.

Đồng hồ hiển thị "END", sau 10 phút nếu không có bất kỳ hoạt động nào, máy sẽ chuyển sang trạng thái không hoạt động.

Cách Sấy Hiệu Quả

TRƯỚC KHI CHO ĐỒ VÀO MÁY

KHÔNG SẤY NHỮNG ĐỒ SAU: Các đồ đặc biệt mỏng manh như rèm lưới, len, lụa, vải có viền kim loại, quần tất/vớ nylon, các loại vật liệu cồng kềnh như vải thun, chăn, chăn/mền lông vũ, túi ngủ và bất kỳ đồ nào có chứa xốp cao su hoặc các vật liệu tương tự như xốp cao su.

- Luôn làm theo hướng dẫn ghi trên nhãn mác quần áo:

Có thể Sấy

Sấy bình thường (nhiệt độ cao)

Sấy nhiệt độ thấp

Không được Sấy

- Đóng vỏ gối bằng dây kéo hoặc dây buộc để tránh các đồ giặt nhỏ bị rối vào bên trong. Đóng đinh bấm, khóa kéo, móc, đai thắt và dây tạp dề. Cần phân loại đồ giặt theo loại và mức độ sấy khô.
- Không sấy khô quá mức nhằm tránh làm nhàu và tiết kiệm năng lượng.
- Tránh sấy quần áo sẫm màu chung với đồ có lông tơ sáng màu như khăn tắm vì lông tơ có thể bám vào quần áo.
- Đồ giặt phải được vắt kỹ trước khi cho vào máy sấy.
- Đồ dệt kim (đồ lót dệt kim) có thể co lại một chút sau khi sấy. Vui lòng không sấy quá mức các mặt hàng thuộc loại này. Nên lường trước hiện tượng co ngót khi chọn kích thước mua đồ vải.
- Để tránh đồ sấy bị tích điện khi hoàn tất sấy, hãy sử dụng chất làm mềm vải khi bạn giặt đồ hoặc dùng chất xả vải dành riêng cho máy sấy quần áo.
- Luôn lấy đồ ra khỏi máy khi máy đã sấy xong.
- Nếu một số đồ riêng lẻ vẫn còn ẩm sau khi sấy, hãy đặt thời gian sấy tiếp ít nhất là 30 phút. Điều này sẽ đặc biệt cần thiết đối với đồ có nhiều lớp (cổ áo, túi, v.v.).

Đảm bảo rằng không có vật kim loại nào còn sót lại trong đồ giặt (kẹp tóc, các loại ghim, tiền xu...)

- Thắt nút áo gối, đóng dây khóa kéo, móc và miếng gài. Buộc bất kỳ thắt lưng hoặc băng dài nào. Để tránh đồ giặt bị rối: Đóng khóa kéo, cài nút chăn và buộc dây hoặc ruy-băng lỏng lẻo (ví dụ như tạp dề). Lật các mặt hàng có vải hai lớp từ trong ra ngoài (với áo gió phủ cotton, lớp cotton phải ở ngoài cùng). Những loại vải này sau đó sẽ khô tốt hơn. Lấy tất cả các đồ vật như bật lửa và diêm ra khỏi túi.

KHỐI LƯỢNG SẤY TỐI ĐA

Khối lượng đề xuất được chỉ ra trong biểu đồ chương trình bên dưới
Quy tắc chung:

- Cotton, vải lanh: đầy thùng sấy nhưng không được nén quá chặt;
- Vải tổng hợp: không quá ½ thùng sấy;
- Các loại vải và len lông cừu chuyên dụng: không quá ¼ thùng.
- Sấy khối lượng nhỏ hơn sẽ không hiệu quả kinh tế.

CẢNH BÁO: Không được cắm điện thông qua thiết bị chuyển mạch bên ngoài như bộ hẹn giờ, hoặc được kết nối với mạch điện thường xuyên được bật/tắt tự động.

TRỌNG LƯỢNG ĐỒ GIẶT

Áo choàng tắm	1600gr	Váy ngủ	265gr
Khăn ăn	130gr	Đồ lót nữ	130gr
Vỏ chăn/mền	930gr	Áo lao động dày	800gr
Drap giường	665gr	Áo sơ mi	265gr
Vỏ gối	266gr	Pyjama	130gr
Khăn bàn ăn	330gr	Áo blouse	665gr
Khăn tắm	265gr	Đồ lót nam	130gr
Khăn bàn trà	130gr		

CHƯƠNG TRÌNH SẤY TỰ ĐỘNG

Chương trình Sấy	Tải lượng tối đa	Chi tiết
Tiêu chuẩn	8kg	Sấy hỗn hợp quần áo thông thường. Có thể chọn cường độ sấy khác nhau.
Cotton	8kg	Sấy vải cotton. Có thể chọn cường độ sấy khác nhau.
Sợi Tổng hợp	4kg	Sấy vải sợi tổng hợp. Có thể chọn cường độ sấy khác nhau.
Đồ Khổ lớn	2kg	Sấy vải ga giường, vỏ chăn mền. Có thể chọn cường độ sấy khác nhau.
Khăn tắm	4kg	Sấy khăn tắm. Có thể chọn cường độ sấy khác nhau.
Đồ Len	1kg	Đồ len và dệt kim.
Lông vũ	3.5kg	Lông vũ.
Đồ Trẻ em	3kg	Quần áo trẻ em.
Khí nóng		Sấy vải mỏng như lụa. Máy sấy phụ thuộc vào thời gian hiển thị, bất kể mức độ sấy.
Làm mới		Quần áo được khử mùi và tươi mới ở cường độ sấy yếu, máy sấy phụ thuộc vào thời gian hiển thị, không phụ thuộc vào mức độ sấy.
Thời gian		Sấy vải dày hoặc nhiều lớp (khăn bông xù), máy sấy phụ thuộc vào thời gian hiển thị, không phụ thuộc vào mức độ sấy. Dùng để làm khô nhiều loại vải hoặc với khối lượng nhỏ.
Đồ lót	2kg	Đồ lót
Đồ Jean	4kg	Đồ Jean
Áo Sơ-mi	2kg	Áo Sơ-mi
Đồ Thể thao	2kg	Đồ Thể thao

Lưu ý: Sấy áo choàng tắm và khăn tắm không quá 6kg tổng lượng.

Vệ Sinh & Bảo Trì

- Bạn phải NGẮT máy khỏi nguồn điện trước khi làm bất kỳ công việc vệ sinh hoặc bảo trì nào.
- Không làm sạch máy sấy bằng cách phun nước trực tiếp vào máy. Không vệ sinh máy sấy bằng benzen, chất ăn mòn, cồn hoặc axeton. Nếu không, máy có thể bị đổi màu, biến dạng, hư hỏng. điện giật hoặc hỏa hoạn.
- Quá trình sấy khô, bảng điều khiển hoặc cửa có thể tích tụ hơi ẩm..

VỆ SINH BẢNG ĐIỀU KHIỂN

- Làm sạch bằng khăn mềm và ẩm. Không sử dụng các chất mài mòn.
- Không xịt chất tẩy rửa trực tiếp lên bảng điều khiển.
- Phần hoàn thiện của bảng điều khiển có thể bị hỏng do một số sản phẩm tẩy vết bẩn.
- Không để các sản phẩm tẩy vết bẩn gần máy sấy. Lau sạch ngay nếu đã lỡ để máy tiếp xúc với các sản phẩm này.

VỆ SINH LỒNG SẤY

- Sử dụng khăn ẩm với chất tẩy rửa nhẹ, không ăn mòn phù hợp với bề mặt thép không gỉ.
- Loại bỏ cặn bám bên trong lồng và lau khô bằng khăn sạch.

VỆ SINH CỬA MÁY

Vệ sinh định kỳ phần bên trong cửa để loại bỏ lông tơ, giúp máy sấy hoạt động chính xác và hiệu quả.

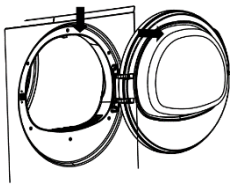

VỆ SINH THÂN MÁY

- Thân máy được phủ sơn độ bóng cao. Làm sạch bằng khăn mềm, ẩm. Không sử dụng các chất ăn mòn.
- Bảo vệ bề mặt khỏi các vật sắc nhọn vì chúng có thể làm xước hoặc làm hỏng lớp sơn hoàn thiện.
- Không đặt bất kỳ vật nặng hoặc sắc nhọn hoặc hộp chất tẩy rửa nào lên máy sấy.

Cảnh Báo: không sử dụng máy khi không có bộ lọc gắn bên trong

VỆ SINH BỘ LỌC

- Mở cửa máy.
- Tháo bộ lọc xơ vải bằng cách nhấc lên và mở bộ lọc xơ vải.
- Làm sạch xơ vải, xơ và bông bằng tay hoặc bằng khăn mềm.
- Đóng bộ lọc xơ vải và đặt trở lại vào máy.
- Một lớp có thể tích tụ trên các lỗ lọc có thể gây tắc nghẽn bộ lọc sau khi sử dụng máy sấy một thời gian. Rửa bộ lọc xơ vải bằng nước ấm để loại bỏ lớp tích tụ trên bề mặt bộ lọc xơ vải. Làm khô hoàn toàn bộ lọc xơ vải trước khi lắp lại.

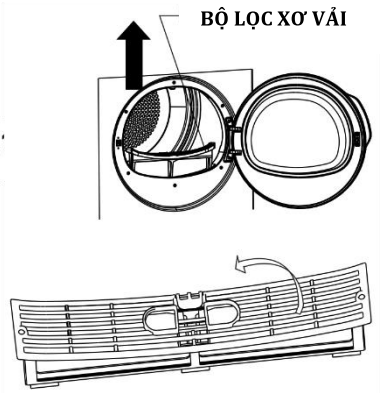

- Bộ lọc xơ vải phải được làm sạch thường xuyên.

Luôn làm sạch bộ lọc xơ vải và các bề mặt bên trong của cửa sau mỗi lần sấy.

VỆ SINH HỘC CHỨA NƯỚC

Hộc chứa nước thu gom tất cả nước từ bộ ngưng tụ. Phải đổ hết nước trong hộc sau mỗi lần sấy. Nếu bình chứa nước đầy, máy sẽ không hoạt động. đèn báo sẽ sáng và có chuông báo. Để tiếp tục chương trình, bạn phải đổ hết nước trong hộc.

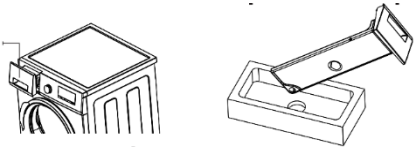

- Kéo hộc nước ra khỏi máy.
- Đổ hết nước trong hộc.
- Gắn hộc lại vào máy.
- Nhấn nút Bắt đầu/Tạm dừng.

VỆ SINH CẢM BIẾN ĐỘ ẨM

Trong quá trình hoạt động, máy sấy này sử dụng cảm biến độ ẩm quần áo, và phải làm sạch cảm biến này. Do trong quá trình sấy sẽ có chất bẩn bám trên bề mặt cảm biến. Làm sạch cảm biến trong lồng sấy (xem hình).

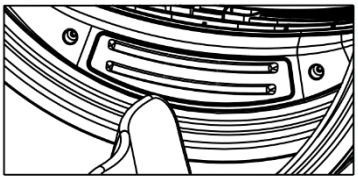

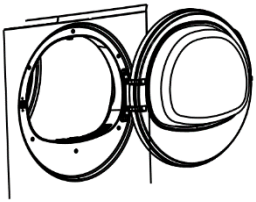

VỆ SINH BỘ NGƯNG TỤ

Bộ ngưng tụ là rất quan trọng để thực hiện việc sấy khô hiệu quả, do đó cần đặc biệt chú ý. Đề nghị bạn vệ sinh bộ ngưng tụ ba hoặc bốn lần mỗi năm.

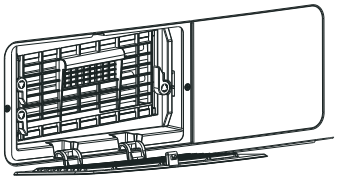

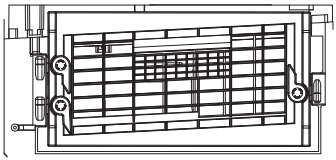

- Tháo nắp đậy bộ ngưng tụ.
- Gỡ 3 lẫy khóa, kéo bộ ngưng tụ ra.
- Rửa sạch bộ ngưng tụ dưới vòi nước chảy.
- Lắp bộ ngưng tụ vào máy, cố định 3 lẫy khóa, đóng nắp đậy.

Sự Cố & Hướng Giải Quyết

Một số sự cố có thể do thiếu bảo trì đơn giản hoặc sơ suất, có thể được giải quyết dễ dàng mà không cần gọi thợ sửa chữa. Trước khi liên hệ với Trung tâm Bảo hành, vui lòng thực hiện các bước kiểm tra được liệt kê bên dưới:

Trong quá trình vận hành máy, đèn báo ***Bắt đầu/Tạm dừng*** có thể nhấp nháy để cho biết máy không hoạt động. Khi sự cố đã được xử lý xong, hãy nhấn nút ***Bắt đầu/Tạm dừng*** để khởi động lại chương trình, Nếu đã nhiều lần kiểm tra mà sự cố vẫn tiếp diễn, hãy liên hệ với Trung tâm Bảo hành.

Sự Cố	Nguyên Nhân	Giải Pháp
Máy không hoạt động	• Chưa cắm điện nguồn. • Chưa đóng cửa máy. • Chưa bấm nút ***Bắt đầu/Tạm dừng***	• Cắm điện nguồn. • Đóng cửa máy. • Bấm nút ***Bắt đầu/Tạm dừng***
Sấy không khô như ý	• Chọn sai chương trình. • Bộ lọc bị tắc nghẽn. • Khối lượng sấy không đúng. • Có chất bẩn trên bề mặt cảm biến ẩm	• Chọn đúng chương trình. • Vệ sinh bộ lọc. • Chọn khối lượng theo hướng dẫn. • Rửa sạch cảm biến ẩm.
Đèn lồng sấy tắt	• Bóng đèn bị hỏng	• Thay thế bóng đèn
Máy ngừng hoạt động sau khi mới chạy. Đèn ***END*** bật sáng	• Khối lượng đang sấy chưa đủ tải trọng, hoặc quá khô không đủ ẩm để sấy.	• Chọn mức độ sấy cao hơn (ví dụ: chọn ***Nặng*** thay vì chọn ***Mạnh***)
Máy chạy lâu bất thường	• Sấy quá tải	• Giảm bớt khối lượng sấy

Nếu bạn không thể xác định hoặc giải quyết sự cố, hãy liên hệ với Trung tâm Bảo hành của chúng tôi. Trước khi gọi điện, hãy ghi lại kiểu máy, số sê-ri và ngày mua máy. Trung tâm Bảo hành sẽ yêu cầu các thông tin này.

THÔNG SỐ KỸ THUẬT

Model máy	DC-80S5C
Khối lượng sấy (kg)	8.0
Kết nối điện; Điện áp, Tổng công suất	220-240/50 | 2500 Watt
Trọng lượng máy (+/-10%)	40 kg
Công suất khi cắm điện bật máy (w)	0.48
Công suất khi cắm điện tắt máy (w)	0.48
Tiêu thụ điện khi đủ tải (kWh)	4.73
Thời gian sấy khi đủ tải (phút)	150
Kích thước máy (mm) R*S*C	595*630*850
Phạm vi nhiệt độ xung quanh (°C)	5 – 35

Sẽ rất nguy hiểm nếu thay đổi các thông số kỹ thuật hoặc cố gắng sửa đổi sản phẩm này bằng mọi cách.

Đảm bảo rằng máy không đè lên dây cáp cấp điện.

Mọi công việc về điện để lắp đặt thiết bị này phải được thực hiện bởi thợ điện có trình độ chuyên môn.

QUAN TRỌNG: Thiết bị này không được lắp đặt âm tường/tủ.

Bao bì: Tất cả bao bì theo máy phải được gỡ bỏ trước khi sử dụng.

Kiểm tra phụ kiện: Mở túi đựng phụ kiện và kiểm tra phụ kiện.

Phụ Kiện	Tên Phụ Kiện	Số Lượng
	Ống thông hơi	01
	Sách hướng dẫn	01

Nếu muốn di chuyển máy, phải vận chuyển theo phương thẳng đứng.

NỐI DÂY TIẾP ĐẤT

Máy sấy này phải được nối tiếp đất. Trong trường hợp hỏng hóc, nối tiếp đất có thể cung cấp điện trở tối thiểu để giảm khả năng bị điện giật.

THOÁT NƯỚC NGƯNG TỤ

Không nhất thiết phải xả nước ngưng tụ theo cách thủ công, mà có thể xả trực tiếp từ máy ra ngoài, bằng cách thay ống thoát nước

Kéo ống nước ra theo hướng mũi tên, Sau đó lắp ống thoát nước.

Có thể sử dụng kìm nếu nó khó thực hiện.

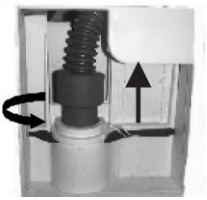

GỠ BỎ BAO BÌ SẢN PHẨM

Trước khi sử dụng máy, phải gỡ bỏ xốp bao bì bên trong lồng sấy.

1. Mở cửa nạp.
2. Bóc các dải keo dính từ bên trong máy.
3. Tháo hai xốp bao bì ra khỏi máy.

Nếu vị trí để máy không bằng phẳng, hãy điều chỉnh độ cao có sẵn của chân máy. Không lót thêm đồ vật nào dưới chân máy.

Khí nóng phát ra từ máy sấy quần áo có thể đạt nhiệt độ lên đến 60°C. Không lắp đặt máy trên sàn không chịu được nhiệt độ cao.

Nhà sản xuất từ chối mọi trách nhiệm nếu biện pháp an toàn dưới đây không được tuân thủ:

- Trước khi cắm điện, hãy đảm bảo điện áp cung cấp giống với điện áp được ghi trên bảng thông số của thiết bị.
- Khi đẩy các cạnh của tấm trên máy sấy xuống theo đường chéo, không được di chuyển máy lên hoặc xuống. (Vui lòng kiểm tra cả hai hướng) nếu máy bị rung khi đẩy tấm trên theo đường chéo, hãy điều chỉnh lại chân. Chân có thể điều chỉnh.
- Nếu phích cắm cần được thay thế vì bất kỳ lý do gì, hãy tiến hành như mô tả bên dưới. Các dây trong dây dẫn nguồn điện có màu theo mã sau:

  Dây vàng+xanh lá cây: Dây tiếp đất.
  Dây xanh biển: Dây nguội.
  Dây đỏ: Dấy nóng (dây có điện).

	• Dây điện bị cắt phích cắm vào ổ cắm là một mối nguy hiểm nghiêm trọng về an toàn (điện giật). • Đảm bảo rằng phích cắm đã cắt được vứt bỏ một cách an toàn. • Cắm điện vĩnh viễn: Trong trường hợp máy được cắm điện vĩnh viễn, bạn cần lắp đặt công tắc hai cực. Công tắc không được làm đứt cáp nối đất màu vàng và xanh lá cây tại bất kỳ điểm nào.

Vật Liệu Bao Bì

Các vật liệu được đánh dấu bằng ký hiệu có thể được tái chế.

- PE: polyetylen
- PS: polystyren
- PP: polypropylen

Điều này có nghĩa là các vật liệu như PE, PS, PP có thể được tái chế bằng cách loại bỏ đúng cách trong các thùng thu gom rác thích hợp.

Máy cũ không còn sử dụng: Sử dụng các địa điểm thải bỏ được chính quyền cho phép đối với cho thiết bị điện máy cũ.

Biểu tượng trên sản phẩm hoặc trên bao bì chỉ ra rằng sản phẩm này không được coi là rác thải sinh hoạt. Cần đưa đến điểm thu gom rác thích hợp để tái chế thiết bị điện và điện tử. Bằng cách đảm bảo sản phẩm này được xử lý đúng cách, bạn sẽ giúp ngăn ngừa các hậu quả tiêu cực tiềm ẩn đối với môi trường và sức khỏe con người. Để biết thêm thông tin chi tiết về việc tái chế sản phẩm này, vui lòng liên hệ với chính quyền địa phương, dịch vụ xử lý rác thải gia đình của bạn hoặc cửa hàng nơi bạn mua sản phẩm.

Biểu tượng có nghĩa là: thận trọng, rủi ro cháy. Các vật bị dính dầu có thể bốc cháy tự phát, đặc biệt khi tiếp xúc với các nguồn nhiệt như trong máy sấy quần áo. Các vật dụng trở nên ấm, gây ra phản ứng oxy hóa trong dầu. Quá trình oxy hóa tạo ra nhiệt. Nếu nhiệt không thể thoát ra ngoài, các vật dụng có thể trở nên đủ nóng để bắt lửa. Việc chất đống, xếp chồng hoặc cất giữ các vật dụng bị dính dầu có thể ngăn nhiệt thoát ra ngoài và do đó gây ra nguy cơ hỏa hoạn. Nếu không thể tránh khỏi các loại vải có chứa dầu thực vật hoặc dầu ăn hoặc đã bị ô nhiễm bởi các sản phẩm chăm sóc tóc được cho vào máy sấy quần áo, trước tiên chúng nên được giặt bằng nước nóng có thêm chất tẩy rửa - điều này sẽ giảm bớt, nhưng không loại bỏ được nguy cơ.

Sử Dụng Tiết Kiệm & Hiệu Quả

Để tiết kiệm năng lượng và giúp bảo vệ môi trường, bạn nên làm theo những gợi ý sau:

- Cố gắng tải công suất tối đa của máy vì tải nhỏ sẽ không kinh tế.
- Không sấy quá khô để tránh làm quần áo bị nhăn và tiết kiệm năng lượng.
- Chọn chương trình sấy tùy theo loại đồ giặt và mức độ khô cần thiết.
- Vệ sinh bộ lọc thường xuyên để tránh làm khô quá nhiều thời gian và tiêu thụ nhiều điện.
- Nơi để máy sấy phải thông gió tự nhiên tốt.

TIÊU CHUẨN BẢO HÀNH

Bảo hành của nhà sản xuất đối với sản phẩm này chỉ có hiệu lực với điều kiện:

- Máy đã được lắp đặt chính xác và chỉ được sử dụng trên nguồn điện được ghi trên bảng thông số.
- Máy chỉ được sử dụng cho mục đích gia đình thông thường và tuân theo hướng dẫn của nhà sản xuất.
- Thiết bị chưa được bảo dưỡng, bảo trì, sửa chữa, tháo rời hoặc giả mạo bởi bất kỳ người nào không được nhà sản xuất ủy quyền.
- Bảo đảm này bổ sung cho các quyền theo luật định và hợp pháp khác của người tiêu dùng.

NGOÀI PHẠM VI BẢO HÀNH

- Thiệt hại do vận chuyển, do sử dụng không đúng cách hoặc do lơ là, thay thế bất kỳ bóng đèn nào hoặc các bộ phận có thể tháo rời bằng thủy tinh hoặc nhựa.
- Các thiết bị được sử dụng với mục đích thương mại, cho thuê.

⚠	Các vật bị dính dầu có thể bốc cháy tự phát, đặc biệt khi tiếp xúc với các nguồn nhiệt như trong máy sấy quần áo. Các vật dụng trở nên ấm, gây ra phản ứng oxy hóa trong dầu. Quá trình oxy hóa tạo ra nhiệt. Nếu nhiệt không thể thoát ra ngoài, các vật dụng có thể trở nên đủ nóng để bắt lửa. Việc chất đống, xếp chồng hoặc cất giữ các vật dụng bị dính dầu có thể ngăn nhiệt thoát ra ngoài và do đó gây ra nguy cơ hỏa hoạn. Nếu không thể tránh khỏi các loại vải có chứa dầu thực vật hoặc dầu ăn hoặc đã bị ô nhiễm bởi các sản phẩm chăm sóc tóc được cho vào máy sấy quần áo, trước tiên chúng nên được giặt bằng nước nóng có thêm chất tẩy rửa - điều này sẽ giảm bớt, nhưng không loại bỏ được nguy cơ.

SƠ ĐỒ ĐIỆN

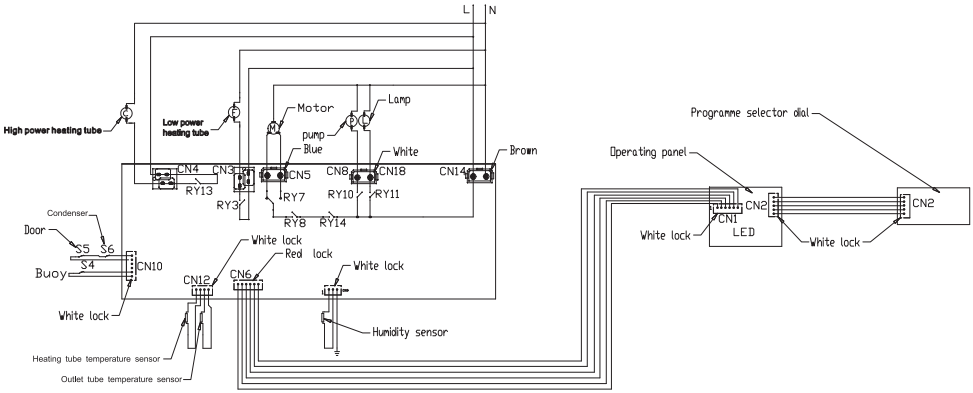

Galanz

Tumble Dryer

OWNER'S MANUAL

PREFACE

Thank you for choosing our dryers.Please read this manual carefully. It provides instruction, use, and maintenance. Retain it for future reference. Record the model and serial numbers of your machine. Quote this information to your dealer if you require service.

Applicable Models

DC-80S5C

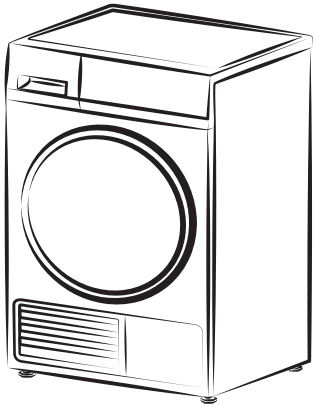

The following symbols are used in this manual:

Important information concerning your personal safety and information on how to avoid damaging the appliance

General information and tips

Environmental information

Thank you for choosing our dryer.
Please read this OWNER'S MANUAL carefully prior to using and keep it for further reference.

WARNING

Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed.Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

The rear surface of appliance shall be placed against a wall.

The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Possible electric shocks

- Disassembly, repair or modification can't be carried out by people other than professional maintenance staff.
- The household electrical supply system (the current, the voltage, the cable)such as a fuse with suitable specifications should be provided. should meet requirements of the dryer under normal load, and safety devices .
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't disconnect the power plug by pulling the supply cord. Hold the power plug with your hand.
- Don't use the supply cord when connection of the power plug and the supply cord is loose.
- Don't touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Don't over-bend the supply cord or put it under heavy weight.
- Don't use the supply cord /socket /power plug if it is damaged or broken.

Possible Explosions

- Don't put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Don't connect / disconnect the power plug when leakage of gas or other combustible gas occurs.

Fire accidents / short circuit or electric leakage may occur

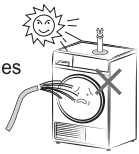

- Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffer from rainfalls, lest igniting damages or other accidents occur easily due to gathered water drops on electrical components.
- Do not install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Do not use water shooting at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- If you have washed your laundry with stain remover, you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- A carpet must not obstruct the openings in the base.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

Warning **Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**

Personal injury may occur

- This machine is not intended for use by young children or infirm persons without supervision.
- The package materials may be dangerous to children. Put all package materials (e.g. the plastic bag) to places unreachable to children.
- Don't touch laundries in the drying drum till the dryer stops working completely.
- Don't keep children or pets nearby when the dryer is working, for they may be trapped into the dryer. Please check carefully the drum before closing the door.

Other instructions

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instruction on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be places in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable ,the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final pat of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door ,a sliding door or a door with a hinge on the opposite side to hat of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- The lint trap has to be cleaned frequently.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil.
- Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Product description

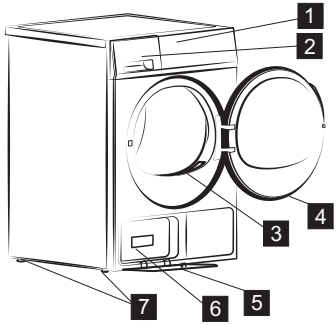

1.Control Panel
2.Drainage container
3.Fluff filter
4.Door
5.Condenser cover
6.Condenser
7.Adjustment leg

Control panel

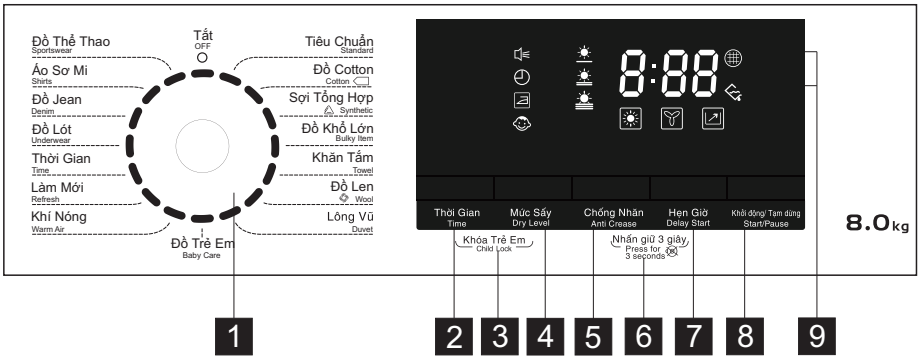

1. Programme Selection Knob
2. Time
3. Child Lock
4. Dry Level
5. Anti Crease
6. Buzzer
7. Delay Start
8. Start/Pause
9. Indicator Lights:
   Drainage Container
   Fluff Filter

First Use

- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystryrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes .There may be dust inside a brand new tumble dryer.

Daily Use

Connect the appliance

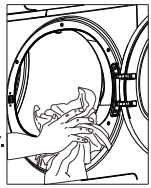

- Open the door
- Place the laundry in the drum, one item at a time ,shaking them out as much as possible.
- Close the door .Please check the laundry does not get caught between the door and filter.

Select the required programme

- Turn the program selector dial to the required program. The corresponding function lights is on. The program will be switched off if you have not pressed any button for 10 minutes.

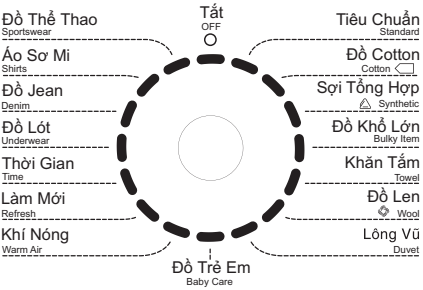

Attention:

- " ▭ " is for the "standard cotton programme". The programme is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.
- Some thick clothes (jeans, big towel). Because of the material characteristics, some place hard to dry. If you find that they are not completely dry at the end of the program. It is recommended to use the "Time" program to dry again.

Automatic controlled drying

- You can choose different programme base on your different clothes materials. The device has the function with sensor the moisture in order to automatically adjust the drying time for optimal drying.
- This automatic control system is fit for most programme except Warm Air, Refresh and Time.

Time controlled drying

- You can choose the time of drying according to the actual situation To cancel a program which is running, turn the program selector dial to "off". At the end of drying, turn the selector dial to "off" to switch the machine off before removing the laundry.

Programme Option buttons

- Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. e. g. choosing the "Heavy" programme, "Buzzer" function and "Anti-Crease" function can be combined. When these buttons are pressed, the corresponding pilot lights comes on. When they are pressed again, the pilot lights go out.

Select the Buzzer

After turning on the appliance ,the buzzer is on if you do none operation .The buzzer can be turned on or be turned off durning the process .By pressing "Anti crease" and the "Delay start" button at the same time, the buzzer will be turned on and the corresponding pilot light comes on.

when the buzzer is on, the signal will sound in the following case:

- Open the door during operation.
- When the water container is full.
- At the end of program after cooling phase.

When the buzzer is on, if you press the "buzzer" button once more, the buzzer will be switched off.

Select the Dry level

- Before you start the machine, you can choose the dry level. The dry level is divided into three grades. (☀ Heavy ☀ Strong ☀ Normal)
- This option is only suitable to the five programs: Standard, Cotton, Synthetic, Bulky Item, Towel.

Select the Anti-creasing

Anti-crease is a default setting at the end of each programmes. Longer Anti-crease can be selected while the programme is standby or pause.

Select Delay start

This button allows you to delay the starting of the program by 24 hours max. This option must be selected after having selected the program and before pressing Start/Pause to start the program. Every time the button is pressed, the time is increased by 1 hour.

It can be selected in both cases before and after selecting option programme (Buzzer,Anti-creasing).
The countdown begins after you have pressed the Start/Pause button and the corresponding light illuminates.
The display shows the remaining time. The remaining time is displayed hour by hour.

Display

The display shows the following information:
After you have selected the program, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the program starts, the remaining time is displayed every 1 minutes

- **Delayed Start.**

If you have selected a delay time by means of the relevant button, the display shows it, The countdown is displayed hour by hour. Once you press the "Start/Pause" button, the appliance will start the delayed process.
If you want to check the selected program ,press the "Delay Start" button again. It shows the duration of the previously selected program.

- **Incorrect option selection**

If you select an option that is not compatible with the program you have selected, the display shows ErS (error) .
If you select other program because of incorrect operation while the program is running, the display shows ErS (error).

Select the Start/Pause

Press this button to start the dryer after having selected the program and the options. If the door of the appliance is opened while the program is running ,this button must be pressed again after closing the door in order to restart the program from the point at which it was interrupted. In this cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

Indicator lights

- These lights indicate the following functions:
- Drying light "" This light indicates that the appliance is in the drying phase.
- Cooling light "" This light indicates that the appliance is in the cooling phase. At the end of drying, there is a two minutes cooling phase to cool the laundry.
- End of programme light "" This light is on at the end of the cooling phase.
- Anti-creasing light "" This light is on when anti-creasing programme is selected.
- Filter light "" It comes on every cycle to remind you that the filter must be cleaned at the end of the programme.
- Child Lock light "" This light indicated the appliance is locked.
- Buzzer light "" This light is on when buzzer programme is selected.
- Delay Start light "" This light is on when delay start programme is selected.
- Drying Type light, this light is on when drying programme is selected depending on the rotating speed of washing machine.
- Tank full light "" It comes on after each program and also when the water tank is full. which remind you to empty the water container. Note! Empty the water container after each program to avoid the alarm when use in next time.

At the end of the programme

All drying programs end with 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration:30 minutes maximum).
If you don't remove the laundry, the machine will stop automatically at the end of the anti-creasing phase. The display shows "End" and the buzzer sounds if you have selected the buzzer. Turn the program selector dial to "off ", all the lights go off.

"Child Lock" functions

When the machine is on, press meantime "Time" and "Dry level" button for several seconds,the system will lock all the buttons. Then all buttons are invalid except "off". If you want to make the appliance to return to the normal state, then press "Time" and "Dry level" button for several seconds meantime again.

The function will be released in the following cases:

- Open the door during operation
- Take out filter drawer during operation
- Water tank full

You can set again the "Child Lock" function when you restart the machine.

After each use

Important!

If the drying program has to be stopped before it reaches the end , we recommend that you turn the program selector dial to position "Refresh" and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance.

To do this first turn thedial to "off " and then to "Refresh" and depress the"Start" button.

Modifying the program

To change a program which is running, first cancel it by turning the programme selector dial to "off ". Select the new program and press the "Start" button.

Attention: According to "-" for the dormant state;

- standby mode, 10 minutes later, without any operation, enter a dormant state.
- controller shows "End", 10 minutes later ,without any operation, enter a dormant state.

Drying Hints

Before loading the laundry

Never tumble dry the following: Particularly delicate items such as net curtains ,woolen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:

may be tumble dried

delicate drying (low temperature)

normal drying (high temperature)

do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them.
- Close press studs, zips, hooks, tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles(knitted underwear) may shrinkage a little during drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Wool". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying ,set a brief post-drying time ,but at least 30 minutes, This will be necessary particularly for multilayered items (e.g. collars ,pockets ,etc.)

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases ,close zip fasteners, hooks and poppers. Tie any belts or long tapes. To avoid laundry becoming tangled: Close zips, button up duvet covers and tie loose ties or ribbons(e.g.of aprons). Turn items with double-layered fabrics inside out(e.g.with cottonlined anoraks, the cotton layer should be outermost). These fabrics will then dry better. Remove all objects from pockets such as lighters and matches.

Maximum loads

Recommended loads are indicated in the program charts:

General rules: **Cotton ,linen :** drum full but not too tightly packed;

Synthetics : drum no more than half full;

Delicate fabrics and woollens: drum no more than quarter full.

Try to load the maximum capacity of the machine as small loads are uneconomical.

WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Drying programmes

Course	Max load	Description of programme
Standard	8kg	Blend materials usual clothes and so on. It is possible to choose different drying strength
Cotton	8kg	Cotton clothes and so on. It is possible to choose different drying strength
Synthetic	4kg	Chemical fiber products and so on. It is possible to choose different drying strength
Bulky Item	2kg	To dry the larger clothes. (bedsheet, Quilt cover) It is possible to choose different drying strength
Towel	4kg	Towel and so on. It is possible to choose different drying strength
Wool	1kg	Knitted sweater and so on.
Duvet	3.5kg	Down jacket
Baby Care	3kg	Baby clothes
Warm Air	–	Used for drying delicate material loads, such as silk, etc. The machine dries depend on the display time, regardless of the drying level.
Refresh	–	The clothes are deodorizing and fresh, and the intensity of drying is weak.The machine dries depend on the display time, regardless of the drying level.
Time	–	Drying thick or multi-layered textiles,the machine dries depend on the display time, regardless of the drying level. e.g. terry towelling items.For drying individual items of laundry or for small volumes.
Underwear	2kg	Underwear
Denim	4kg	Denim
Shirts	2kg	Shirts
Sportswear	2kg	Sportswear

Kind Notice: for drying bathrobe and toweling towel, the max load don't exceed 6kg.

Laundry weights

The following weights are indicative:

Bathrobe	1600g	night dress	265g
napkin	130g	ladies' briefs	130g
quilt cover	930g	men's work shirt	800g
sheet	665g	men's shirt	265g
pillow case	266g	men's pyjamas	130g
tablecloth	330g	blouse	665g
towelling towel	265g	men's underpants	130g
tea cloth	130g		

Care and cleaning

- You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work .
- Don't clean the dryer by directly spraying water onto the dryer. Don't clean the dryer with benzene, thinner, alcohol, or acetone. Otherwise, it may cause discoloration, deformation, damage. electric shock or fire. When cleaning the product, be sure to unplug the power cord.
- Durning the drying cycle, the control panel or the door may accumulate moisture.

Control Panel

- Clean with a soft, damp clothes. Do not use abrasive substances.
- Don't spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
- Apply such products away from your dryer and wipe up any spills or overspray immediately.

Stainless Steel Tumbler

- To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for
- stainless steel surfaces.

Remove the cleaner residue and dry with a clean cloth.

Cleaning the door

Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.



Dryer Exterior

- The enter dryer has a high-gloss finish. Clean with a soft, damp cloth. Don't use abrasive substances.
- Protect the surface from sharp objects as they may scratch or damage the finish.
- Don't place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

Warning | **Do not use the appliance without filter.**

Cleaning the filter

- Open the loading door.
- Remove the lint filter by putting it up and open the lint filter.
- Clean lint, fibre, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.
- A layer can build up on the filter pores that can cause clogging of the filter after using \the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.
- The lint trap has to be cleaned frequently.

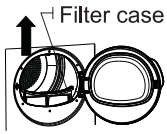

Warning | Always clean the lint filter and the inner surfaces of the loading door after each drying process.



Water container emptied

Water container collects all of the water from condenser. Water container need to be emptied after every drying cycle. If the water container is full, an active programme will break off automatically. the light will comes on and the buzzer sounds. In order to continue the programme, the water container must first be emptied.

1.Pull out water container



2.Tip water into pool

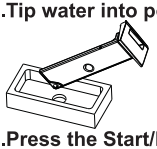

3.Pull the water container in dryer

4.Press the Start/Pause button

Humidty sensor

In the movement process, this device is used for induction clothing humidity, it means that it must be carried on cleaning. Major cause of clean is must scour out the calcium oxide boiler which on the sensor surface up. Clean the sensor in the tumbler (See picture).

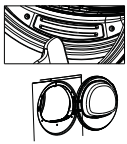

Cleaning the condenser

Condenser is one of the very important assembly to realize effective drying, Therefore need special attention. Suggest you clean the condenser three or four times in every year.

1. Open condenser cover

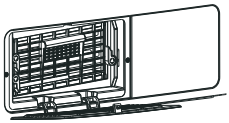

2. Move three pieces of lock rod, pull out the condenser

3. Put the condenser under the tap make water through completely by clean condenser.

4. According to installation of opposite direction

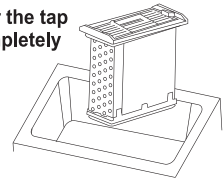

Something not working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Center, please carry out the checks listed below.
- During machine operation it is possible that the Start/Pause pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Pause button to restart the programme, If after all checks, the problem persists, contact your local Service Center.

Malfunction	Possible cause	Solution
Dryer does not work	• Mains plug is not plugged in. • Loading door is open. • Have you pressed the ▶II Button?	• Plug in at mains socket. • Close loading door. • Press the ▶II button again.
Drying results unsatisfactory	• Wrong programme selected. • Filter clogged. • Incorrect volume of laundry. • The sediment on humidity sensor	• Select a different programme the next time you dry(see “Drying programmes”section). • Clean lint filter. • Observe recommended loading volumes. • Washed humidity sensor surface
Drum light does not work(option)	• Light bulb is defective.	• Replace light bulb.
Drying cycle ends shortly after programme starts. “End” light illuminated.	• Not enough washing loaded or washing loaded is too dry for selected programme.	• Select higher drying level (e.g. Heavy instead of Strong).
Drying cycle lasts an unusually long time.	• Load volume is too big.	• Reduce load volume.

If you are unable to identify or solve the problem, contact our service center. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Center will require this information.

IMPORTANT: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Technical data

Dryer Model	DC-80S5C
Dryer Capacity(kg)	8.0
(AC V/Hz)	220-240/50
Rated power (W)	2500
Weight(kg±10%)	40
Power(left-on mode)(W)	0.48
Power(off mode)(W)	0.48
Energy consuption at full load(kWh)	4.73
Programme time at full load(min)	150
Dimensions(W*D*H)(mm)	595X630X850
Ambient temperature range(℃)	5 ~ 35

⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.

⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ **IMPORTANT: The appliance must not bulit-in.**

- **Unpacking:** All packing, must be removed before using the appliance.

- **Check accessory:** Open the accessory bag and check the accessories.

Accessory	Name	Quantity
	drainpipe	1
	manual	1

⚠ Should the appliance be moved, it must be transported vertically.

Earth note

This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock. The power cord has grounding wire with device and power cord with plug. Plug must be inserted into a properly installed and grounded socket(in accordance with all local rules and standards).

Procedure

A separate earth is required by some local rules.In that case,you need buy grounding wire, clips and screws.

Water discharge

It's not necessary to discharge the condensed water to the tank, it can be drained out directly.

change drainpipe

Pull out the water pipe by means of the arrow direction ,Then install the drainpipe.

Such as the pilers can be used if it is difficult to do.

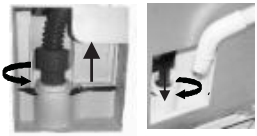

Removing transport safety packaging foam

⚠ Caution!

Before use the machine, the packaging foam must be removed from the drum.

1.Open the loading door.

2.Pull off adhesive strips from inside machine on top of drum.

3.Remove the two packaging foam from the machine.

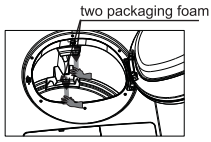

Check across the corner

When press on the edge, the machine should not shake up and down.(please check two direction) when press on the top frame (across the corner), the dryer shakes, need to re-adjust the adjustable feet.

Do not put stacks of blanket or a rope on the floor, which could generrate some heat and affect the machine running.

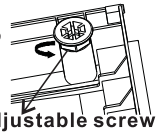

⚠ **IMPORTANT:** The hot air emitted by the tumble dryer can reach temperature of up to 60°C.The appliance must therefore not be installed on floors which are not resistant to high temperatures.

Electrical connection

Any electrical work required to install this appliance should be carried out by aqualified electrician or competent person.

⚠ Warning | **THIS APPLIANCE MUST BE EARTHED.**

⚠ The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- Green and Yellow-Earth
- Blue-Neutral
- Brown-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter ⏚ or by the earth symbol or coloured green and yellow.

⚠ Warning

- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection
  In the case of permanent connection it is necessary that you install a double pole switch.
  The switch must not break the yellow and green earth cable at any point.

Packaging materials

- The materials marked with the symbol ♺ are recyclable.
  >PE<=polyethylene
  >PS<=polystyrene
  >PP<=polypropylene
- This means that they can be recycled by disposing of them properly in appropriate collection containers.
- Old machine
  Use authorized disposal sites for your old appliance. Help to keep your country tidy!
- The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.
- The Symbol mean: caution, risk of fire Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oilaffected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Ecological hints

To save energy and to help protect the environ ment, we recommend that you follow these hints:
Try to load the maximum capacity of the machine as small loads are uneconomical.

- Do not over-dry laundry,this avoids creasing and saves energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.

Standard guarantee conditions

- We undertake that if within 12 months of the date of the purchase this appliance , we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:
- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- This guarantee is in addition to your statutory and other legal rights.

This guarantee does not cover

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of our manufacture which are not marketed by us.

Marking explanation

V	Volt	~	Alternating current		
W	Watt	Hz	Hertz		
	Tested safety		CE marking		risk of fire

Electric diagram

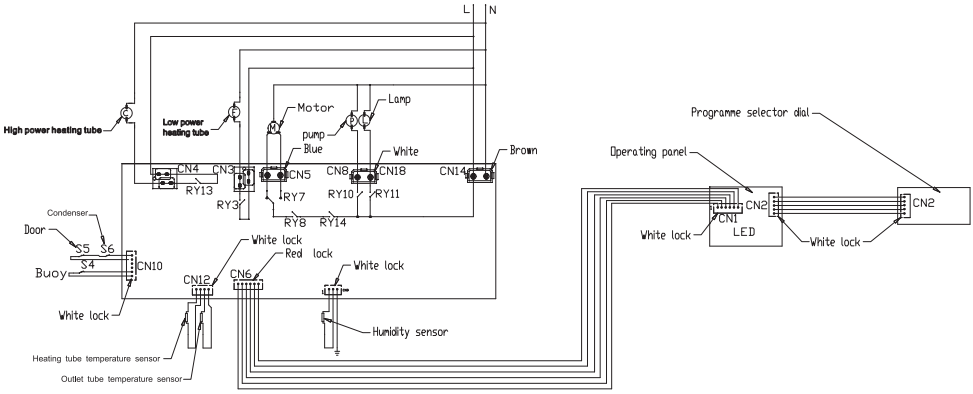

ZHONGSHAN GALANZ CONSUMER ELECTRIC APPLIANCES CO.,LTD

ADDRESS: MAXIN INDUSTRY ZONE, XINGPU ROAD EAST, HUANGPU TOWN, ZHONGSHAN CITY, GUANGDONG PROVINCE.

SERVICE HOTLINE: 86-4008300333 FAX: 86-0760-23305499

POST CODE: 528429

WEBSITE: www.galanz.com